

BATTERY INSTRUCTIONS

GREEN LANTERN – HAL JORDAN PREMIUM FORMAT™ FIGURE

ATTENTION: PLEASE USE CAUTION DURING ASSEMBLY


FOR FURTHER ASSISTANCE:

CALL US (WITHIN U.S.): 1-855-SIDESHOW


CALL US (OUTSIDE U.S.): 1-800-214-2157



Remove top and bottom ends of Power Battery.

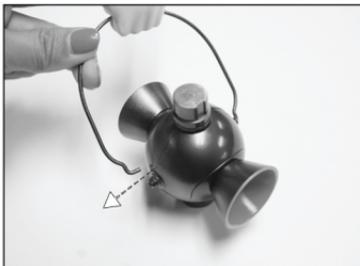

Gently pull and unhinge handle from Battery.

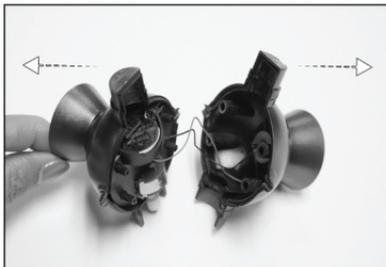

Gently pull apart Power Battery to reveal the CR2032 battery (do not pull too far to snap wires).



Turn to the right to power on light-up feature and turn to the left to power off.

READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT

Product uses one CR2032 battery (located inside lantern)

1. Non rechargeable batteries should not be charged.
2. Do not mix different types of batteries.
3. Do not mix new and used batteries.
4. Only the recommended type of batteries should be used.
5. Batteries should be inserted and oriented with the correct polarity.
6. Exhausted batteries should be removed from the product.
7. The battery terminals must not be short-circuited.
8. Batteries should be disposed in an appropriate place.
9. Remove batteries when not in use or discharged.



SIDESHOW

For more information visit: SIDESHOW.COM/Instructions