

STAR WARS

THE MANDALORIAN & THE CHILD



WARNING

Do not mix old and new batteries or batteries of different types: alkaline, standard (non-rechargeable), or rechargeable (nickel-cadmium, nickel-metal hydride, lithium-ion). Do not charge non-rechargeable batteries. Rechargeable batteries are to be recharged from the product before being recharged. Batteries should be recharged in a well-ventilated area, and the assembly should be done by an adult. Batteries are to be inserted with the correct polarity and exhausted batteries are to be removed from the product. Do not look at the LED light directly. It may be harmful to eyes. Change the batteries and observe the status of the battery regularly to avoid leakage which may cause damage to the product and its electronic system. Never short-circuit the battery terminals. Note: The above situations are not included in maintenance nor replacement.

ライトアップに関するご注意

古い電池と新しい電池を混ぜて使用しないでください。異なる種類の電池を混ぜて使用しないでください。充電可能な電池は、製品から取り外して充電してください。充電は換気の良い場所で、組み立て作業中に必ず大人が行ってください。電池の正負極を正しく挿入してください。使用済みの電池は必ず製品から取り外してください。LEDライトを直接見ると目に有害です。電池の状態を確認し、漏れを防ぐために定期的に電池の状態を確認してください。決して電池の端子をショートしてはいけません。上記の状況はメンテナンスや交換には含まれません。

警告

本品は小児が遊べる玩具ではありません。小児が遊ばない限り、必ず大人が遊んでください。電池の正負極を正しく挿入してください。使用済みの電池は必ず製品から取り外してください。LEDライトを直接見ると目に有害です。電池の状態を確認し、漏れを防ぐために定期的に電池の状態を確認してください。決して電池の端子をショートしてはいけません。上記の状況はメンテナンスや交換には含まれません。

注意：上記の状況はメンテナンスや交換には含まれません。

© 2020 Hot Toys Limited. All Rights Reserved. www.hottoys.jp

THE MANDALORIAN & THE CHILD

CREATIVE PRODUCERS
HOWARD CHAN & JC HONG

PRODUCT DESIGNER
SUN KAM

ENGINEERING DESIGNERS
FJ ZENG, WING CHOW & YANWEN

HEAD PAINTER
JC HONG

HEAD ART DIRECTOR
DA JEONG HEO

HEAD SCULPTOR
JI HO LEE

ACCESSORIES SCULPTORS
MR YUENG & OLIVER LEE & STUDIO HIVE

PAINTING CONTROLLERS
FJ ZENG & WING CHOW


PACKAGE DESIGNERS
JEREMY MAK & MONSTER JR.

PHOTOGRAPHY DIRECTORS
KAKIN TT & MONSTER JR.

PRODUCTION CONTROLLERS & ACCESSORIES SUPERVISORS & COSTUME PRODUCTION DESIGNERS
RAY LING & SUN KAM


© 2020 Hot Toys Limited. All Rights Reserved. www.hottoys.jp

I. EQUIPPING THE JETPACK / ジェットバックについて / 安裝噴射背包

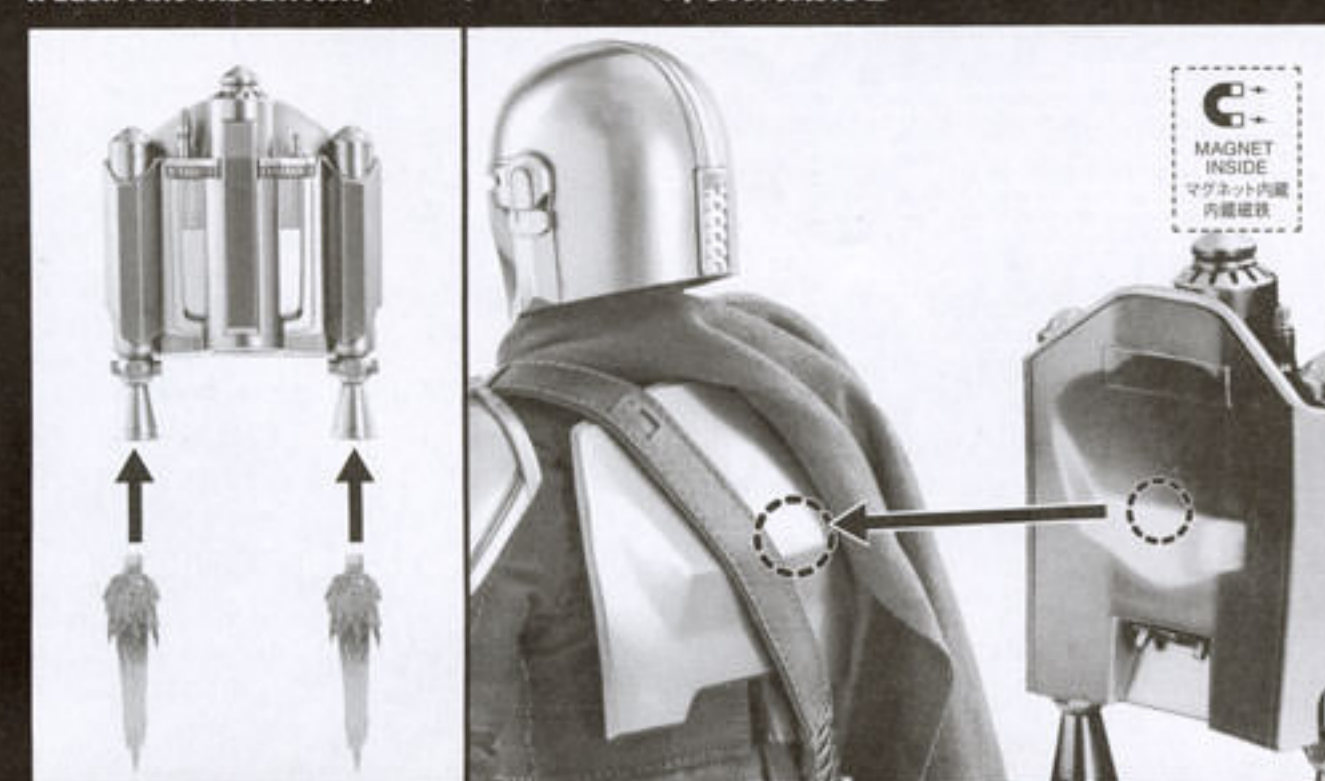


Jetpack thrust fire accessories can be attached as shown. Attach the jetpack onto the figure as indicated. Jetpack thrust fire accessories can be attached as shown. Attach the jetpack onto the figure as indicated. Jetpack thrust fire accessories can be attached as shown. Attach the jetpack onto the figure as indicated.

J. INTERCHANGEABLE HELMET ACCESSORIES / ヘルメット用差し替えパーツについて / 可替換头盔配件

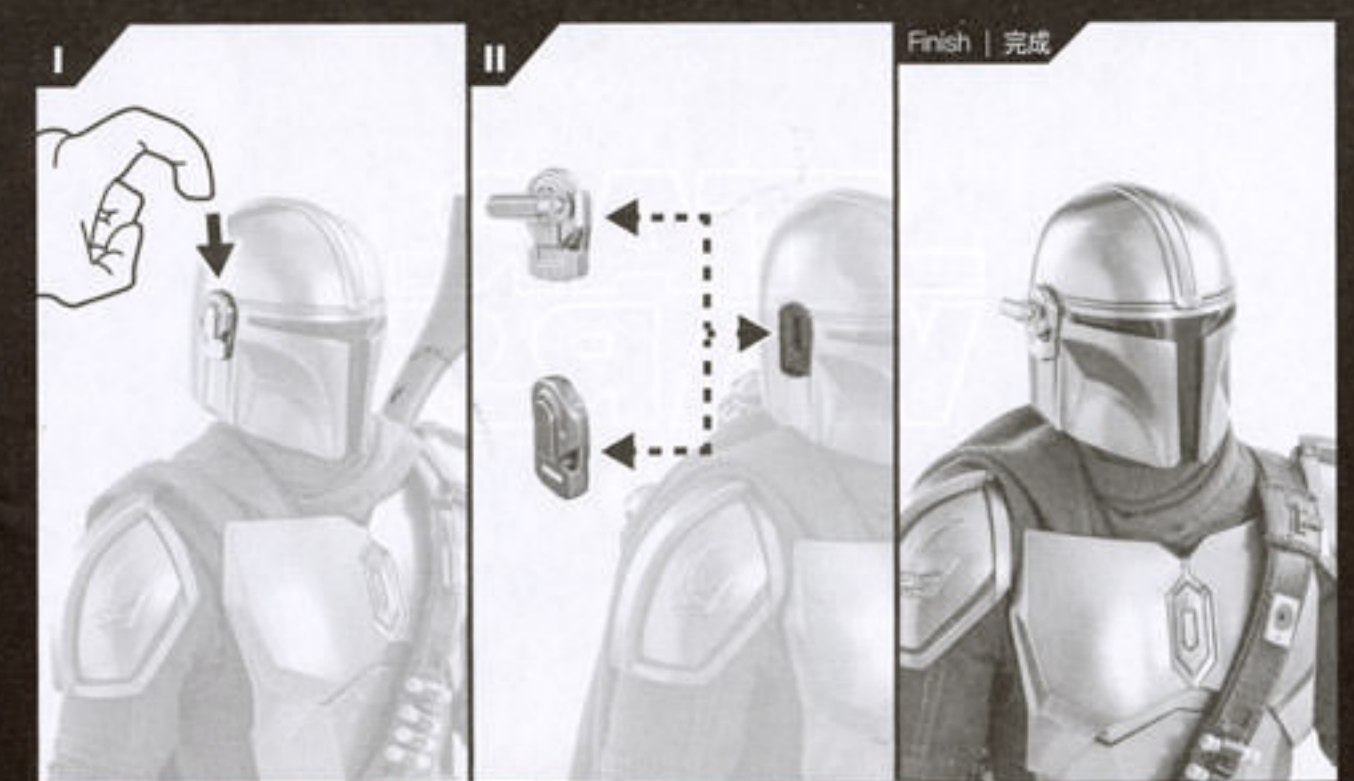


Two styles of helmet accessories can be interchanged as shown. Complete as shown. Two styles of helmet accessories can be interchanged as shown. Complete as shown. Two styles of helmet accessories can be interchanged as shown. Complete as shown.

A. HOLSTERING THE RIFLE / プラスター・ライフルについて / 裝配步枪

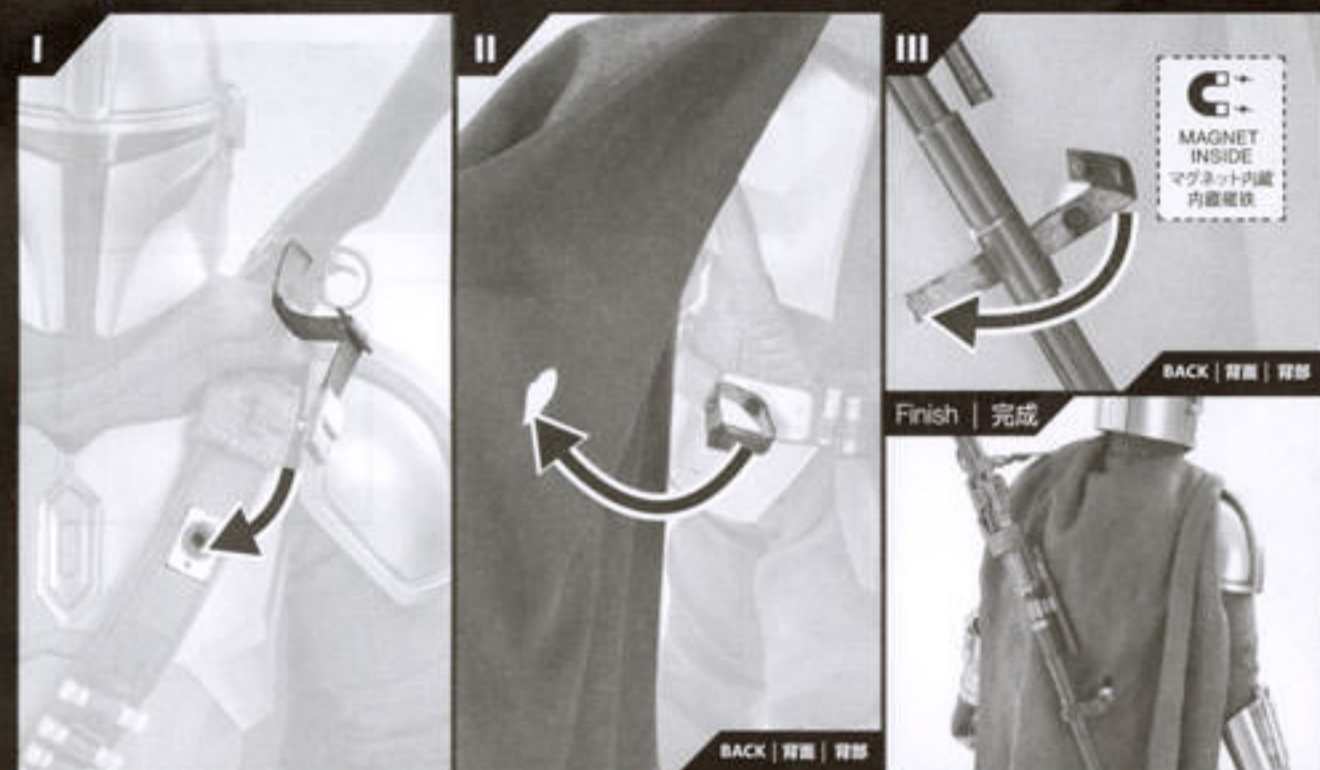


Put the shoulder strap through the indicated part of the cape, and then attach the rifle strap to the front of figure as indicated. Place the rifle at the indicated holder with magnetic function. Complete as shown. Put the shoulder strap through the indicated part of the cape, and then attach the rifle strap to the front of figure as indicated. Place the rifle at the indicated holder with magnetic function. Complete as shown.

B. HOLSTERING THE BLASTER / プラスター・ピストルについて / 裝配手枪

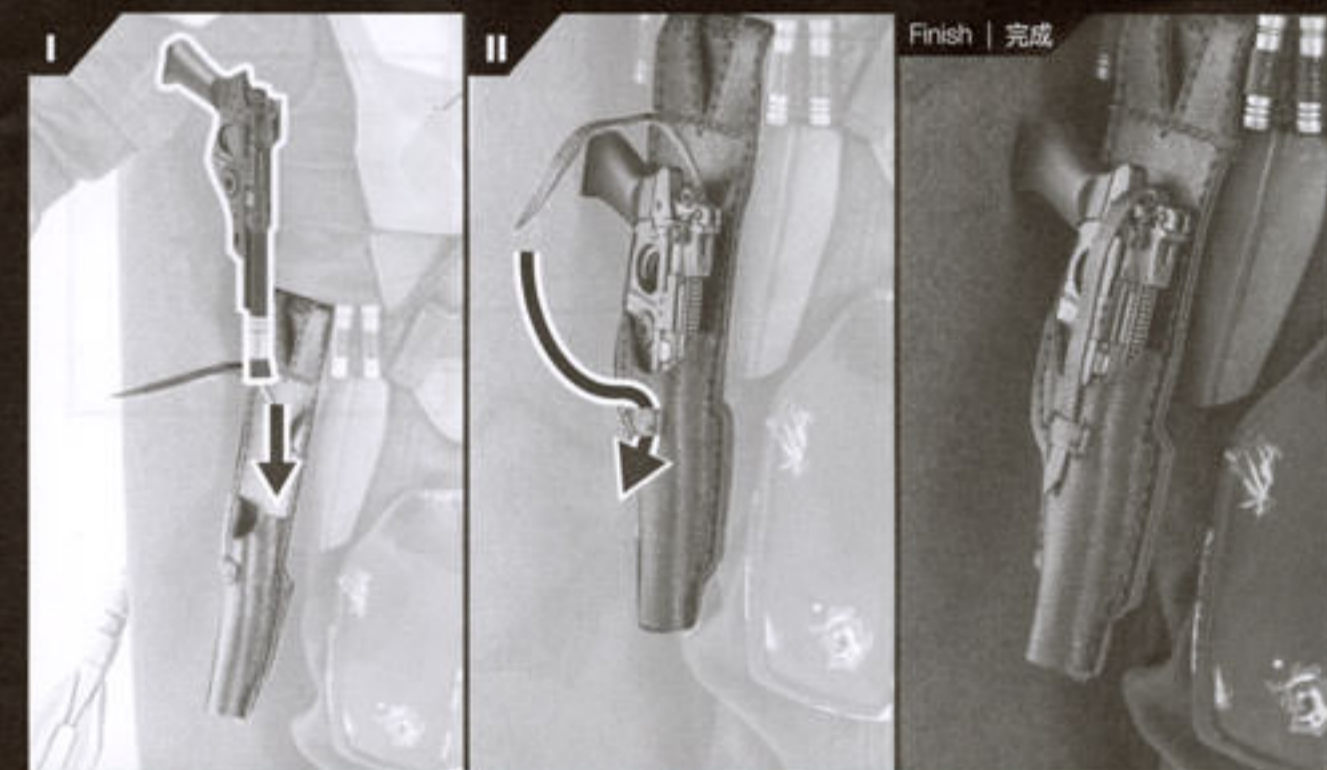


Blaster can be placed into the holsters as shown. Complete as shown. Blaster can be placed into the holsters as shown. Complete as shown. Blaster can be placed into the holsters as shown. Complete as shown.

K. FLAMETHROWER EFFECT ACCESSORY / 炎放射射エフェクトパーツについて / 火焰特效配件

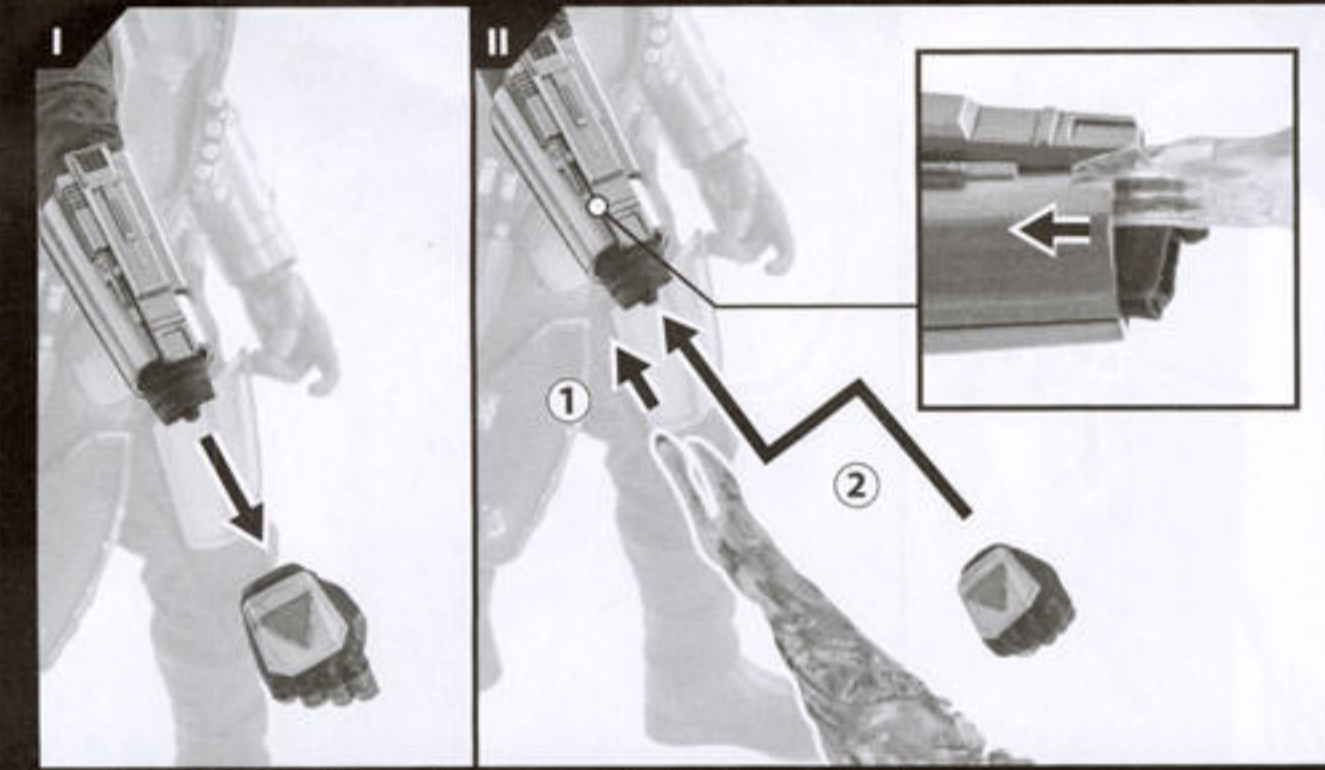


Detach hand. Attach flamethrower effect accessory as indicated. Reattach hand. Complete as shown. Detach hand. Attach flamethrower effect accessory as indicated. Reattach hand. Complete as shown.

L. WIRED GRAPPLING HOOK / グラップリング・フックについて / 勾爪鉄線

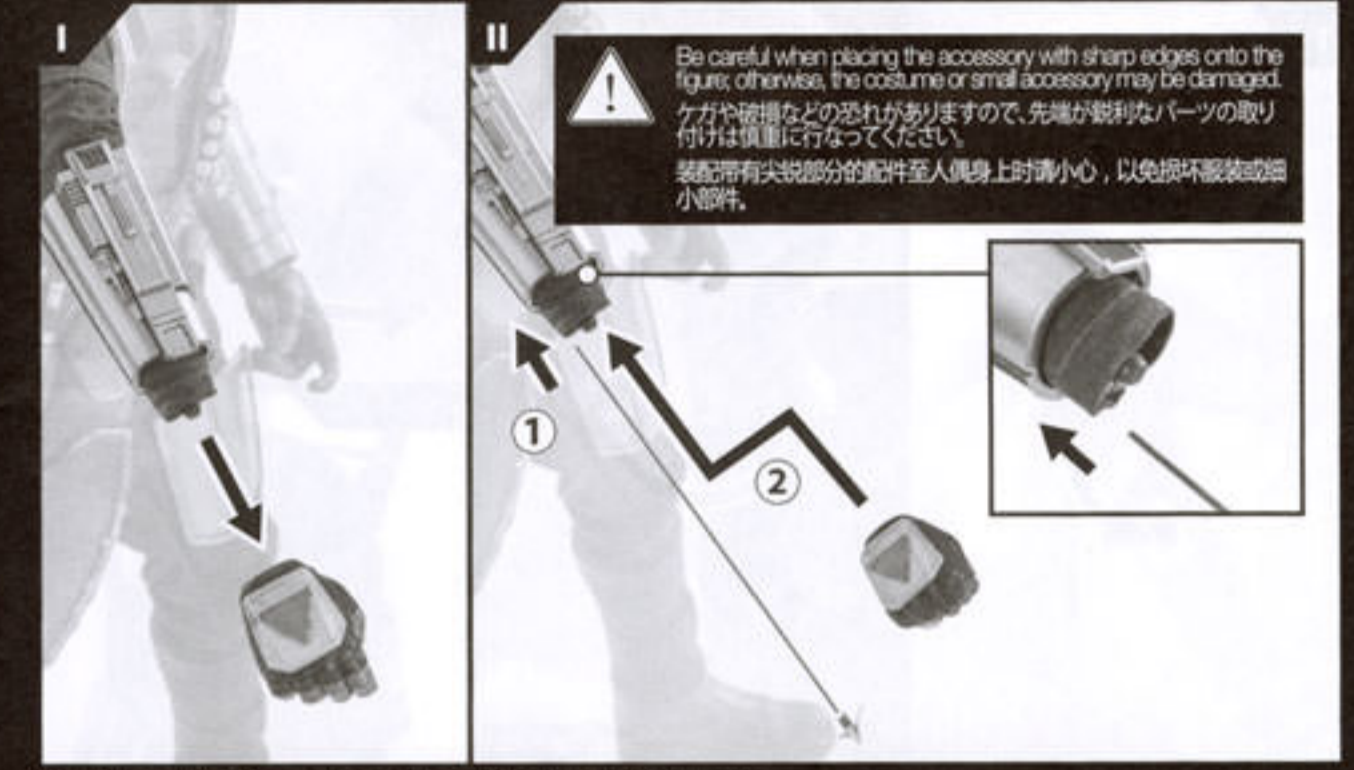


Detach hand. Attach grappling hook as indicated. Reattach hand. Complete as shown. Detach hand. Attach grappling hook as indicated. Reattach hand. Complete as shown.

C. EQUIPPING ACCESSORIES / アクセサリー類の収納について / 使用配件

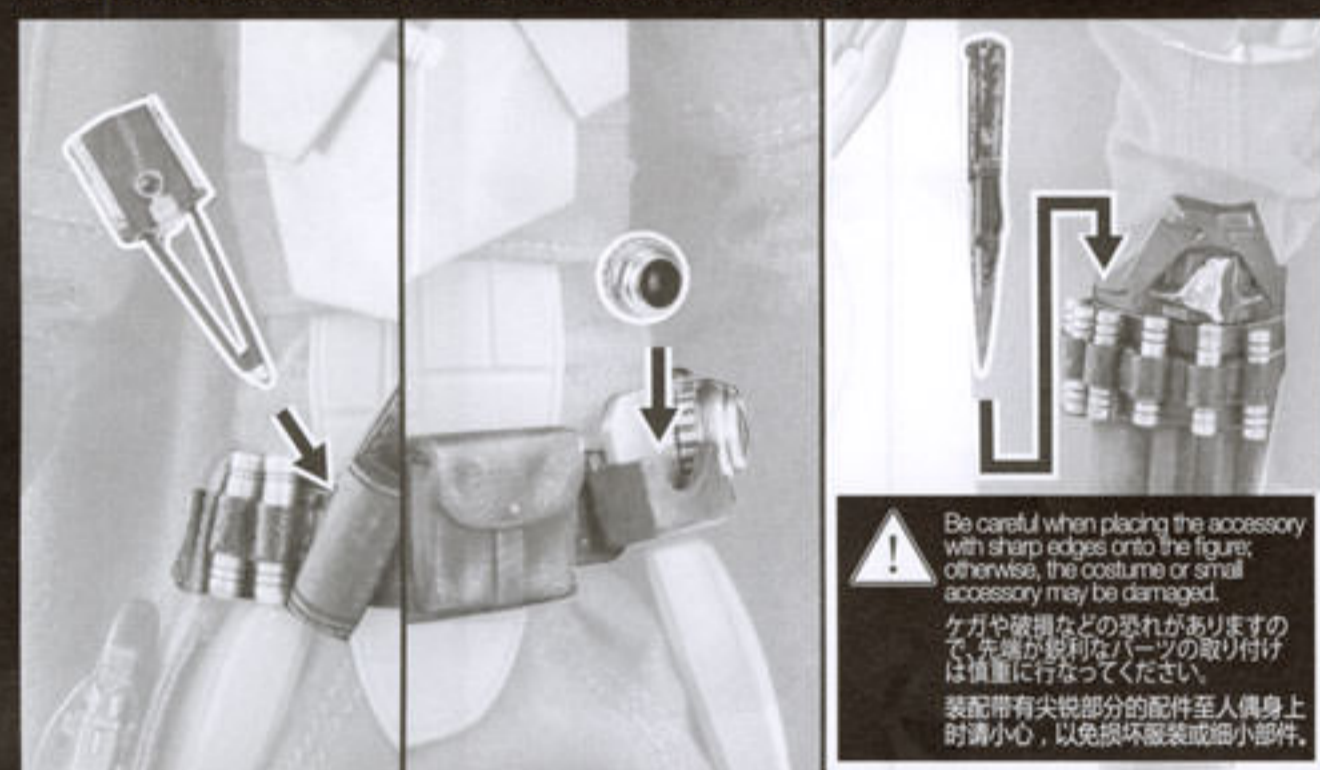


Tracking fob and detonator can be placed to the belt as shown. Complete as shown. Tracking fob and detonator can be placed to the belt as shown. Complete as shown.

D. INTERCHANGEABLE SHOULDER ARMOR / 差し替え用肩当てについて / 可替換肩甲

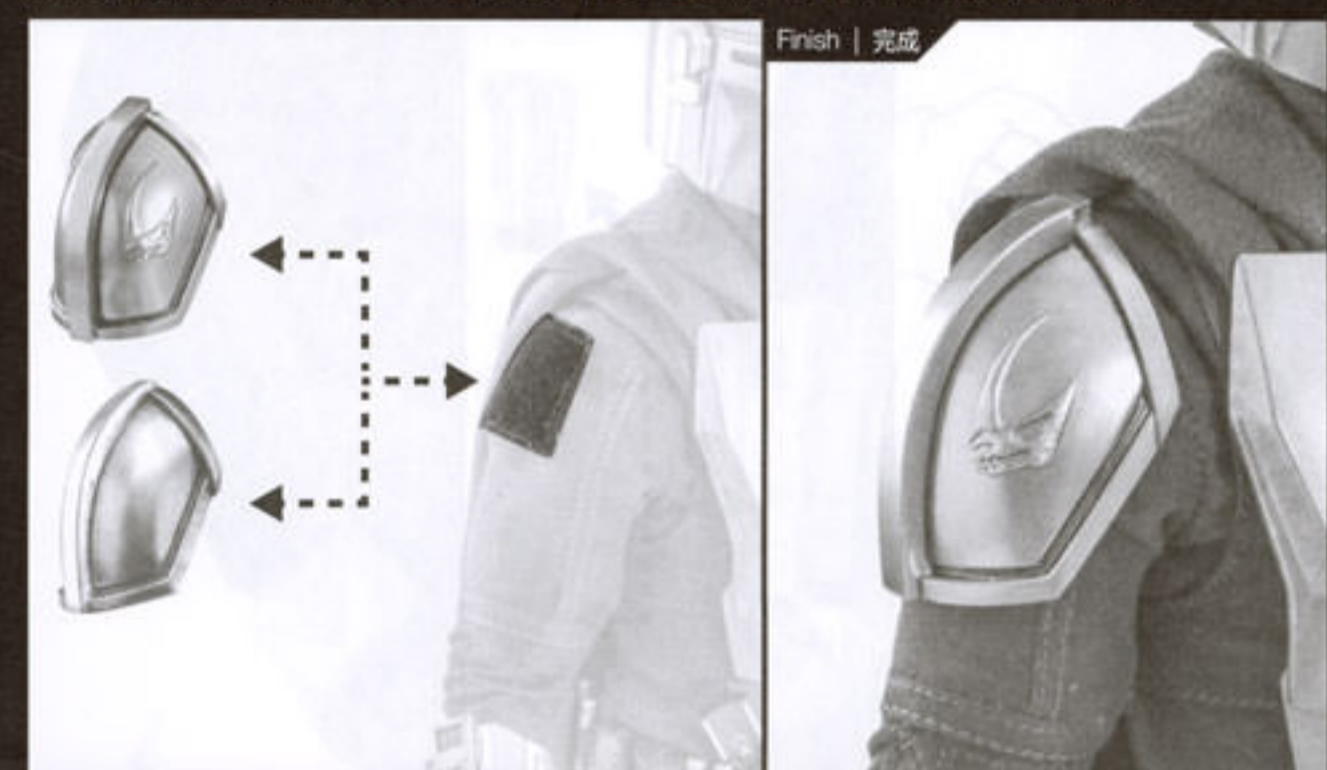


Two styles of shoulder armor can be interchanged as shown. Complete as shown. Two styles of shoulder armor can be interchanged as shown. Complete as shown.

M. INTERCHANGEABLE FIRING MODES / ホイスリング・バードについて / 可替換発炮造型

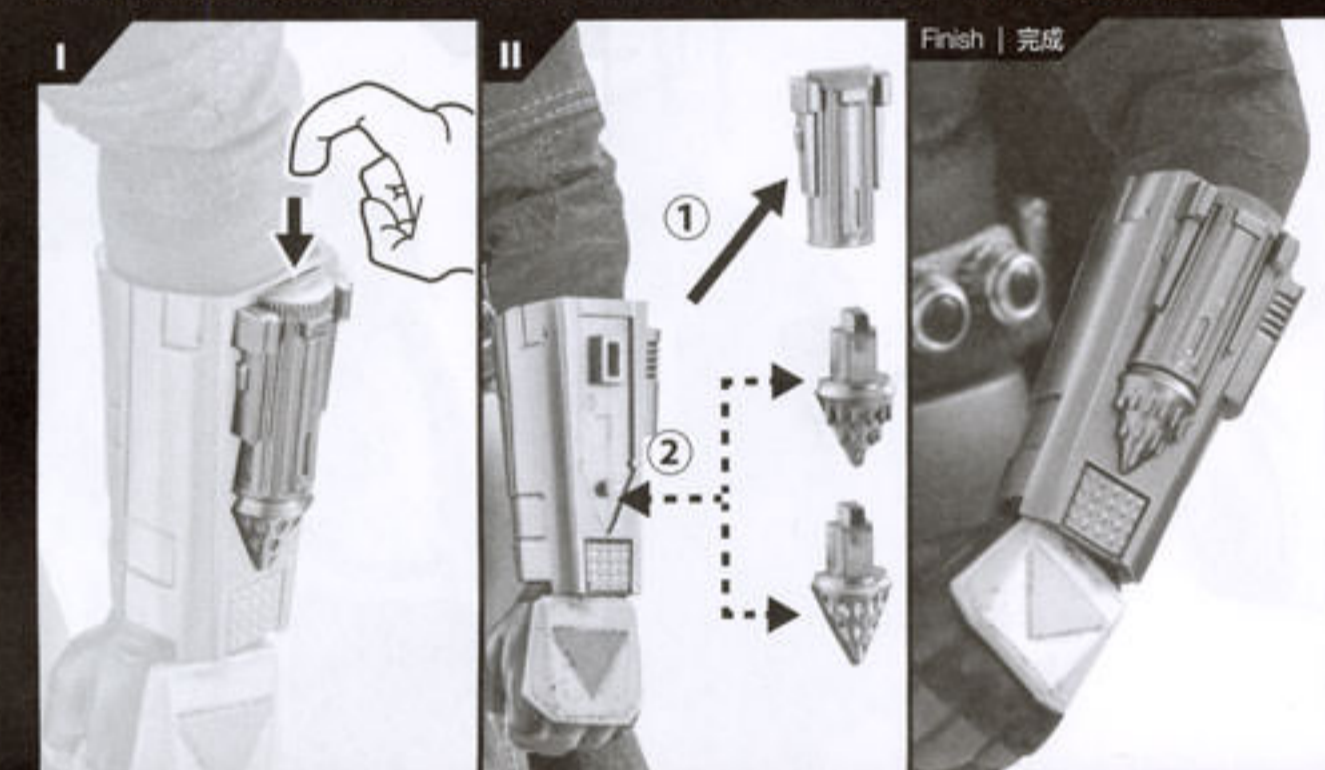


Remove indicated armor from the gauntlet. Two styles of firing mode accessories can be interchanged as shown. Complete as shown. Remove indicated armor from the gauntlet. Two styles of firing mode accessories can be interchanged as shown. Complete as shown.

N. WEARING NECKLACE / ネックレスについて / 佩戴项链

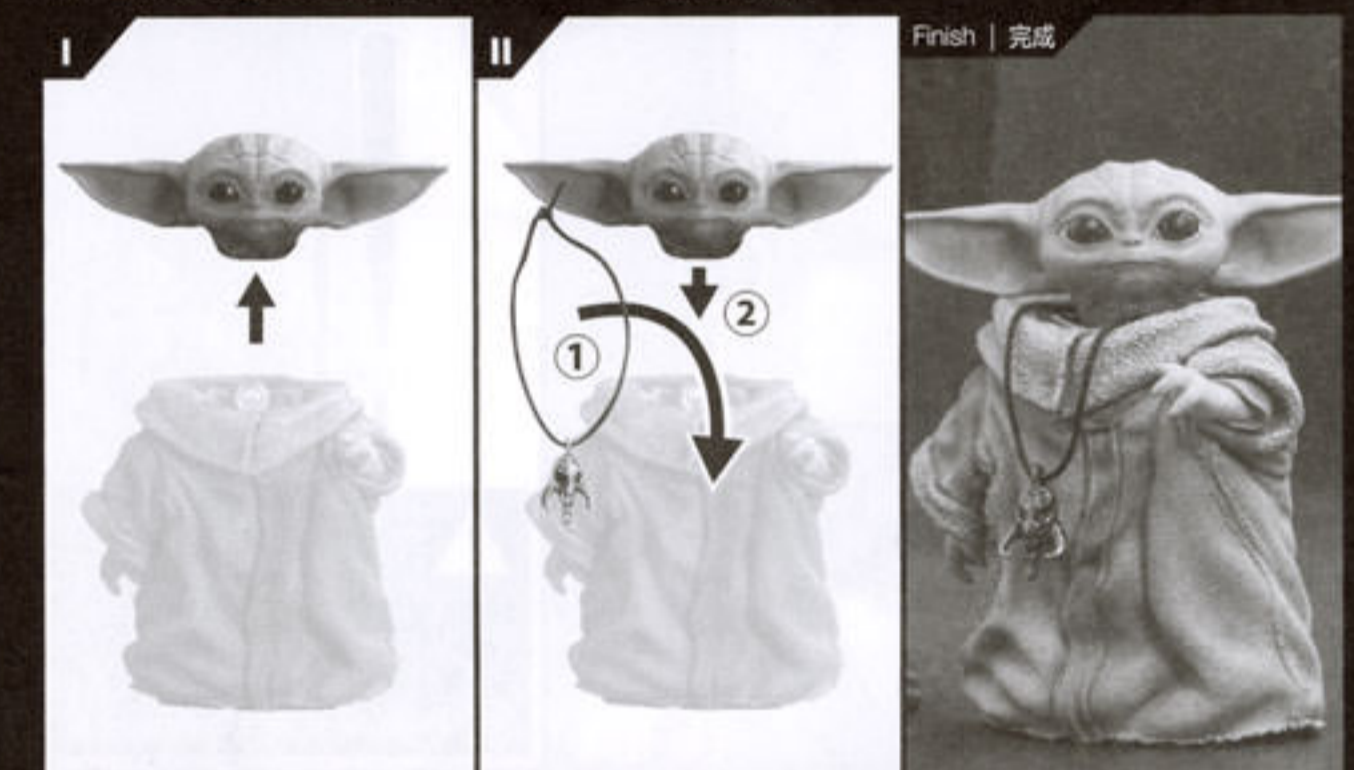

Remove head sculpt to wear the necklace as shown. Complete as shown. Remove head sculpt to wear the necklace as shown. Complete as shown.

E. SIGNATURE POSE / ポージングについて / 指定動作

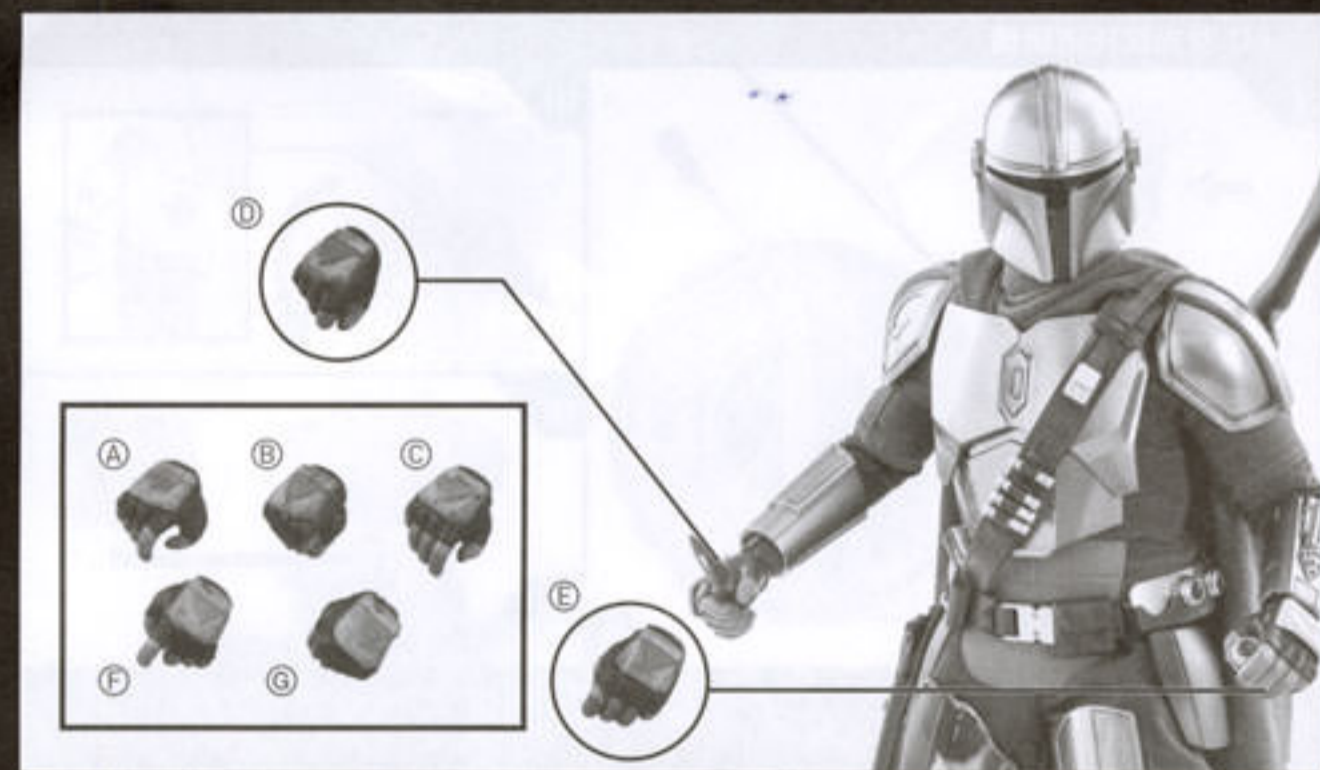


Use the indicated hands to set up the signature pose as shown. Complete as shown. Use the indicated hands to set up the signature pose as shown. Complete as shown.

F. HOLDING TRACKING FOB / 通信機について / 使用追踪器




Use the indicated hand to hold the tracking fob. Complete as shown. Use the indicated hand to hold the tracking fob. Complete as shown.

DELUXE VERSION ACCESSORIES / ボーナサクセサリーについて / 豪華版独有配件

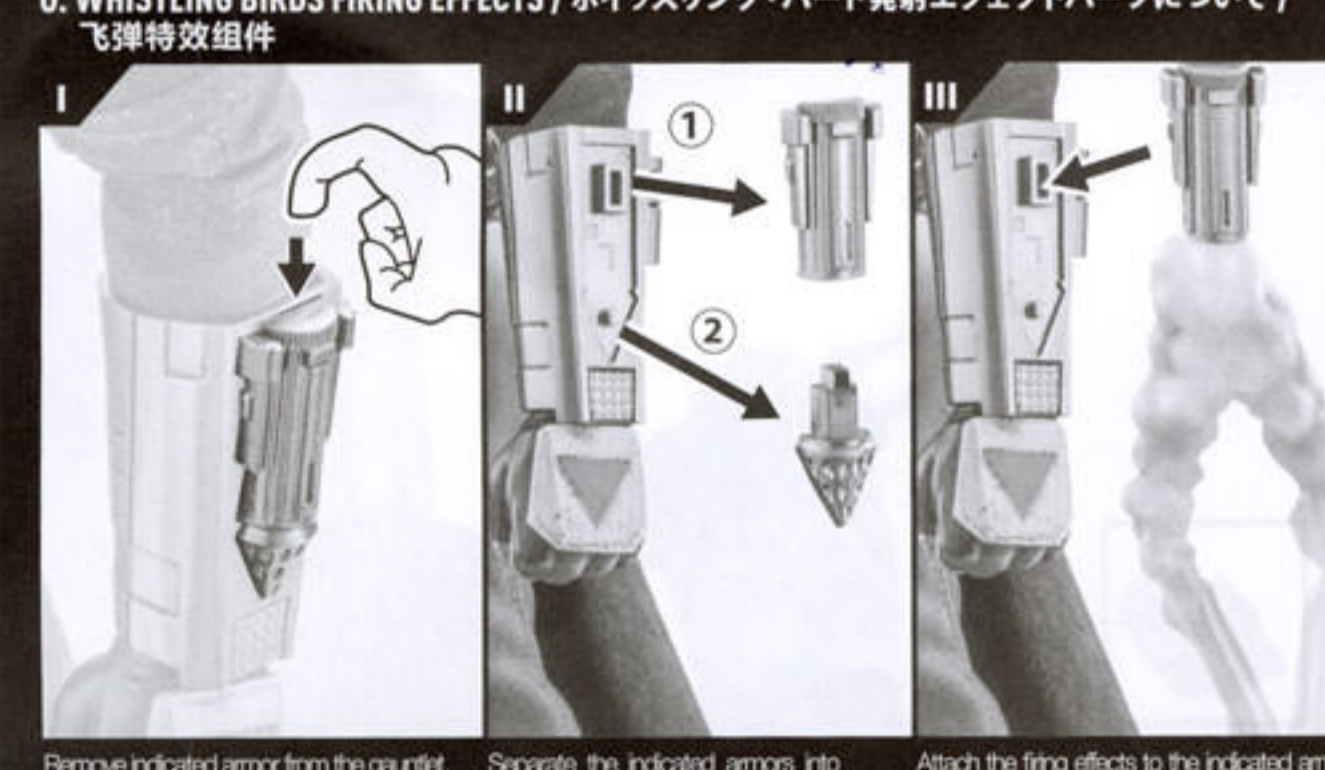


Remove indicated armor from the gauntlet. Attach the firing effects to the indicated armor part, then reattach to the gauntlet. Complete as shown. Remove indicated armor from the gauntlet. Attach the firing effects to the indicated armor part, then reattach to the gauntlet. Complete as shown.

P. LED LIGHTED CAMTANO / 積み重ねたベスカーとベスカー収納ケースについて / LED 发光坎托诺罐桶

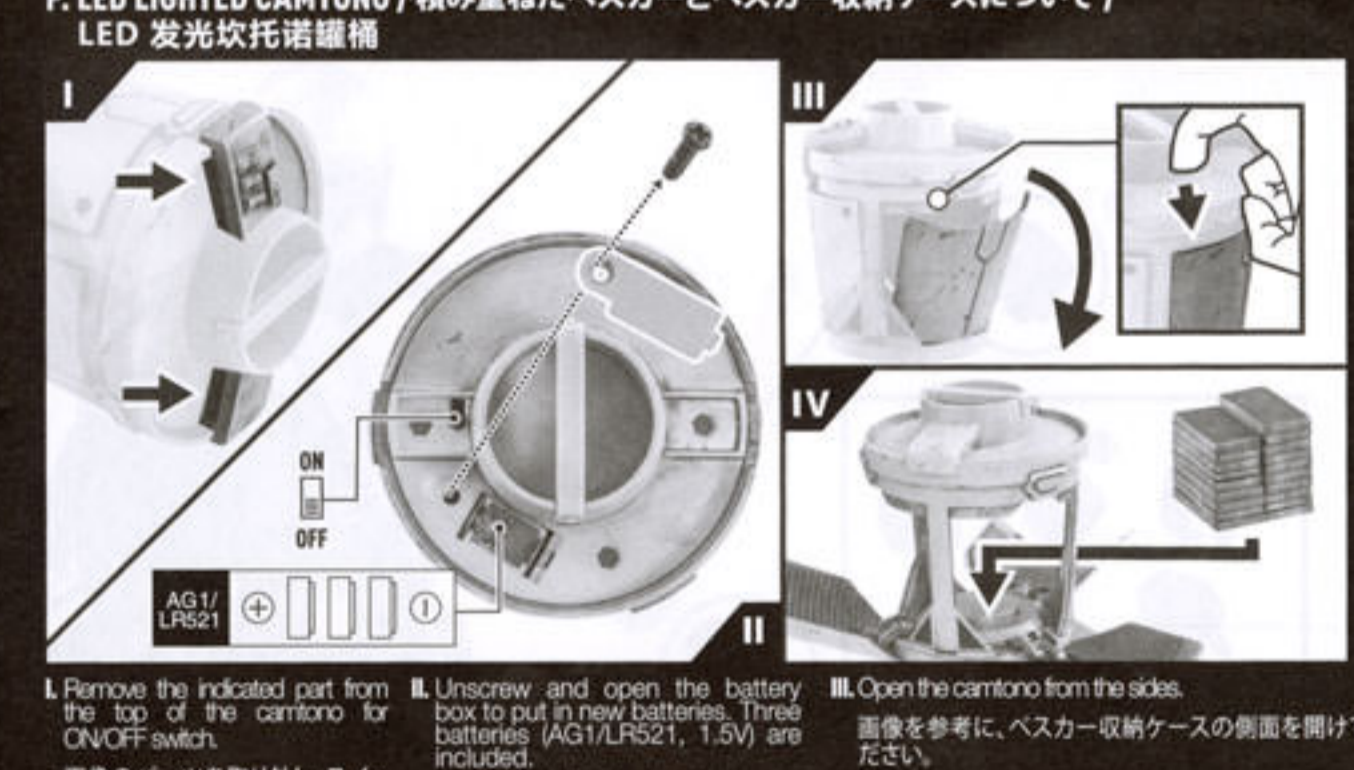

Remove the indicated part from the top of the camtano for ON/OFF switch. Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR521, 1.5V) are included. Place the camtano from the sides. Complete as shown. Remove the indicated part from the top of the camtano for ON/OFF switch. Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR521, 1.5V) are included. Place the camtano from the sides. Complete as shown.

G. WELDING DETACHABLE SCOPE / スコープについて / 使用可裝拆望远镜

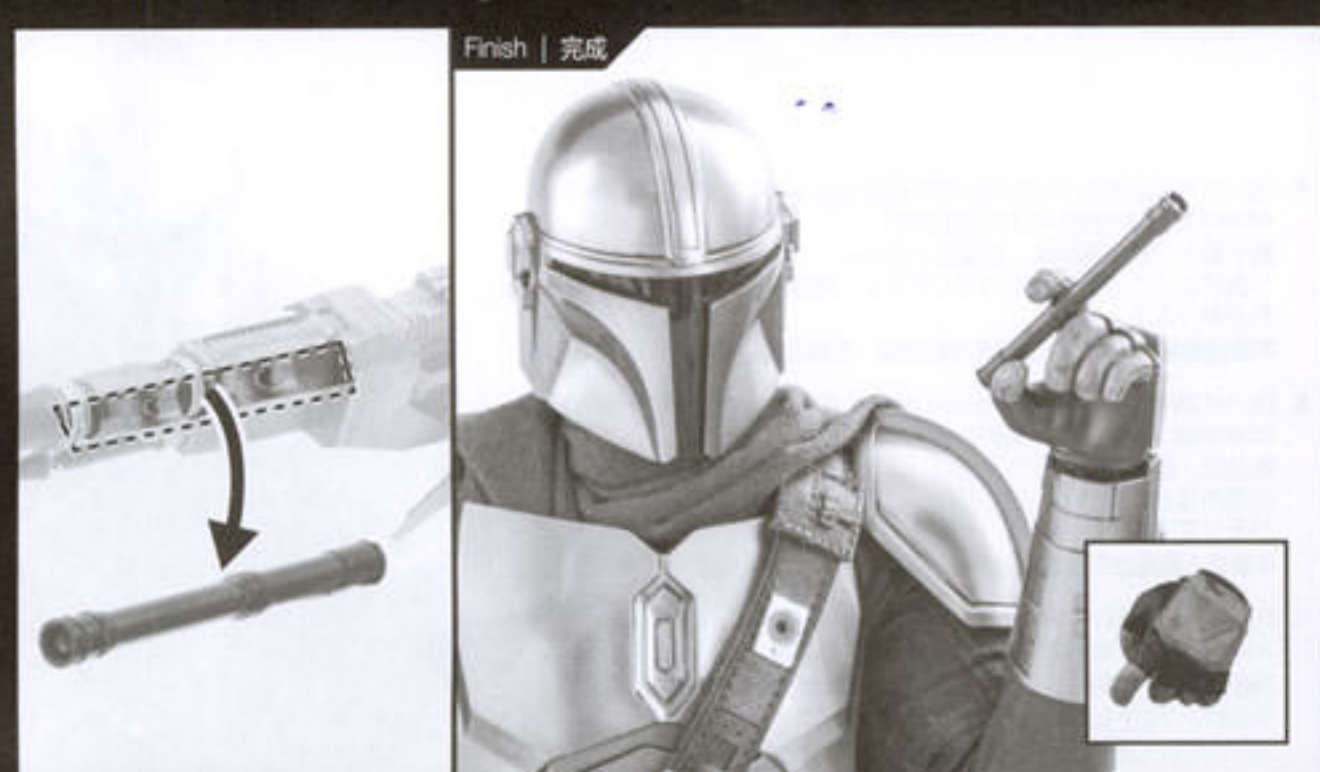


Detach the scope from the rifle as shown. Use the indicated hand to hold the scope. Complete as shown. Detach the scope from the rifle as shown. Use the indicated hand to hold the scope. Complete as shown.

H. WELDING AMMO / 銃弾について / 使用弹药



Ammo are detachable from utility belt and calf armor as indicated. Open the indicated part of rifle to insert the ammo as shown. Complete as shown. Ammo are detachable from utility belt and calf armor as indicated. Open the indicated part of rifle to insert the ammo as shown. Complete as shown.

Q. DIORAMA BASE ACCESSORY / ジオラマ風台座について / 地台配件

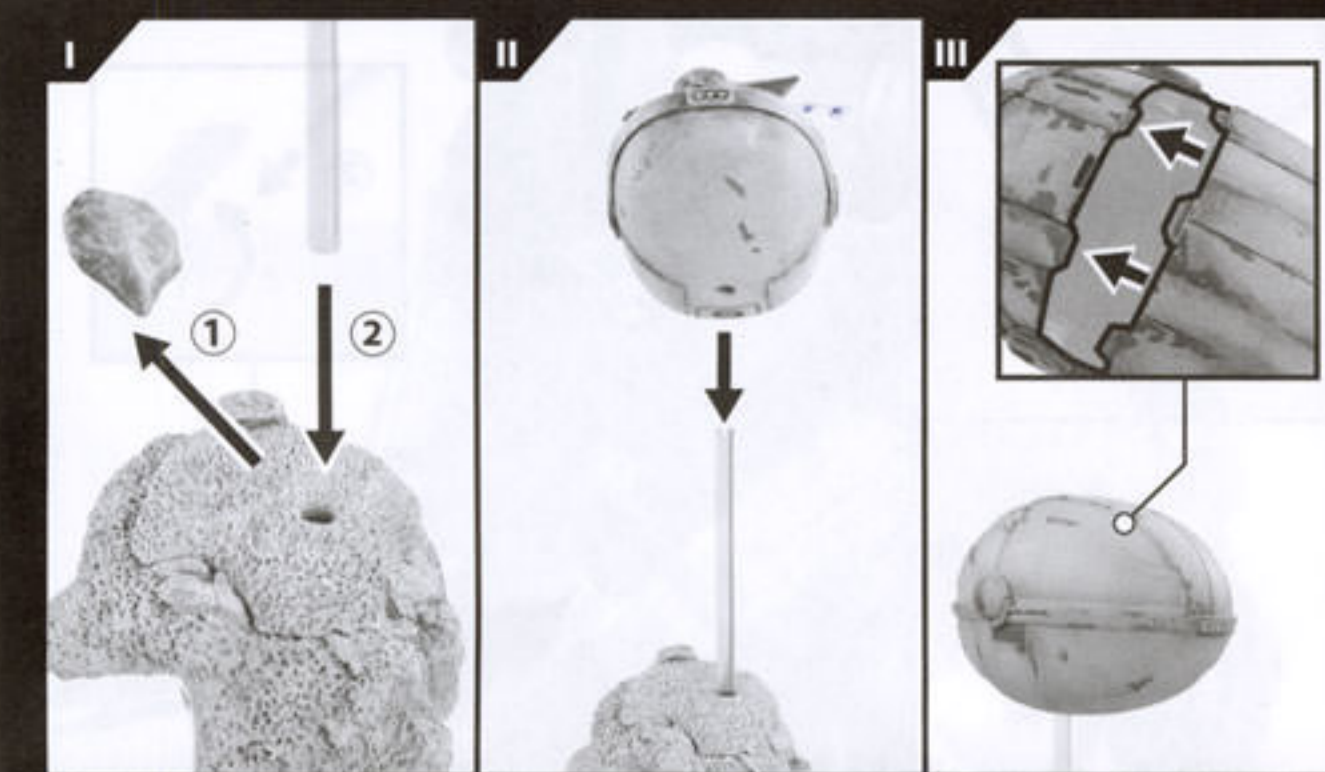

Remove the indicated part on the diorama base accessory to attach pole as indicated. Attach hover pram onto the pole as shown. Complete as shown. Remove the indicated part on the diorama base accessory to attach pole as indicated. Attach hover pram onto the pole as shown. Complete as shown.

A. Do not excessively bend the arms and legs or bend them outward; otherwise, the figure will be damaged. B. Do not place the figure in areas with high temperature and humidity; otherwise, it will be damaged. C. Be careful when handling the figure; otherwise, the costume and the small accessories may be damaged.

