

CONTENT

A. LED LIGHT-UP FUNCTIONS LEDライトアップ機能について LED発光功能	P. 2
B. INTERCHANGEABLE HELMET ARMOR PARTS 可替換頭盔裝甲	P. 3
C. INTERCHANGEABLE CHEST ARMOR PLATE 可替換胸甲	P. 4
D. INTERCHANGEABLE COUNTERMEASURE DISPENSERS 可替換應付裝置	P. 5
E. INTERCHANGEABLE FOREARM ARMOR PLATE 可替換前臂裝甲	P. 6
F. INTERCHANGEABLE CALF ARMOR 可替換小腿裝甲	P. 7
G. ARTICULATED AIR FLAPS 可動風門	P. 8
H. INTERCHANGEABLE HANDS 可替換手	P. 9
I. ARM MOVEMENT 腕部の可動について 手部活動	P. 10
J. WAIST MOVEMENT 腰部の可動について 腰部活動	P. 11
K. LEG MOVEMENT 腿部の可動について 腿部活動	P. 12
L. ASSEMBLING FIGURE STAND 特製台座について 組裝地台	P. 13
M. IRON MAN SUITCASE & HOLOGRAPHIC SCREENS スーツケースとホログラム・スクリーン(ボーン・スクリーン)について 鋼鐵俠手提裝甲箱及螢幕	P. 14
N. ASSEMBLING DIORAMA FIGURE BASE ジオラマ台座(ボーン・スクリーン)について 組裝情景地台	P. 15
CAUTIONS 注意 注意	P. 16



A. LED LIGHT-UP FUNCTIONS | LEDライトアップ機能について | LED発光功能

Removed the indicated part from the top of the helmet as shown.

按圖將頂部指針部位拆卸。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

Open the air flaps. Detach the indicated back armor as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

Remove the forearm armor plates as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

B. INTERCHANGEABLE HELMET ARMOR PARTS | 可替換頭盔裝甲

Detach the helmet armor parts in direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

C. INTERCHANGEABLE CHEST ARMOR PLATE | 可替換胸甲

Detach the chest armor in the indicated direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

D. INTERCHANGEABLE COUNTERMEASURE DISPENSERS | 可替換應付裝置

Two styles of countermeasure dispensers can be interchanged. Attach to figure accordingly.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

E. INTERCHANGEABLE FOREARM ARMOR PLATE | 可替換前臂裝甲

Detach the forearm armor in the indicated direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

F. INTERCHANGEABLE CALF ARMOR | 可替換小腿裝甲

Detach the calf armor in the indicated direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

G. ARTICULATED AIR FLAPS | 可動風門

Detach the articulated air flaps in the indicated direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

H. INTERCHANGEABLE HANDS | 可替換手

Detach the hands in the indicated direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Activate the light-up function by toggling the on/off switch.

利用開關啟動LED發光功能。

Complete as shown.

完成。

I. ARM MOVEMENT | 腕部の可動について | 手部活動

Slightly pull out the shoulder and the shoulder can be moved forward within 30°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Bicep armor to rise up to 120°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Hands can swivel by up to 20° and be raised sideways by up to 85°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

J. WAIST MOVEMENT | 腰部の可動について | 腰部活動

Extend the waist by pulling up the upper body. It can now be moved with the dimension as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Waist can be moved forward and backward within 40°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Waist can be moved forward and backward within 40°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

K. LEG MOVEMENT | 腿部の可動について | 腿部活動

The legs can be extended for better movement.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Legs can swivel by up to 20° and be raised sideways by up to 70°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

The calf can bend backward up to 120°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

The legs can now be moved to preferred position within 90°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

It is suggested to first pull down the feet for wider range of movement. Feet can bend up to 40°.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

L. ASSEMBLING FIGURE STAND | 特製台座について | 組裝地台

Attach the figure pole on the base, finish as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

M. IRON MAN SUITCASE & HOLOGRAPHIC SCREENS | 鋼鐵俠手提裝甲箱及螢幕

Open the suitcase in sequence as indicated. Attach the holographic screens respectively as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

N. ASSEMBLING DIORAMA FIGURE BASE | 組裝情景地台

Follow the steps and attach flexible pole, figure holding clip and indicated parts to the base.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

Attach the indicated parts in the direction as shown.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

Place the indicated platform part on the base.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

Attach the mini gantry arms to the indicated part and place the mechanical arms with magnetic function on the base randomly.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Complete as shown.

完成。

CAUTION | 注意 | 注意

Be careful when bending or positioning the figure; otherwise, the armor parts may collide and lead to paint fading.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

Indicated areas are very sharp. Be careful when handling.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

The figure is heavy in weight. Please handle with care.

扭開電池打并電池盒蓋然後放入電池。盒內包含了3顆電池 (AG1/LR621, 1.5V)。

WARNING

- Don't mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not charge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the product before being recharged.
- Batteries installation, charging rechargeable batteries, and parts assembly should be done by an adult.
- Batteries are to be inserted with the correct polarity and exhausted batteries are to be removed from the product.
- Don't look at the LED light directly; it may be harmful to eyes.
- Change the batteries and observe the status of batteries regularly to avoid leakage which may cause damage to the product and its electricity system.
- Never short-circuit the battery terminals.

ライトアップに関するご注意

- 古い電池と新しい電池またはいろいろな種類の電池を混ぜて使用しないでください。
- 非充電式電池は充電しないでください。
- 充電式電池を使用する場合は、充電する前に必ず製品から取り外してください。
- 電池に関する作業は大人が行ってください。
- 電池は必ず「+」と「-」を正しく向きを入れてください。また、消耗した電池は速やかに製品から取り出してください。
- 点灯中のLEDライトは絶対に直視しないでください。目の痛みや視力障害の原因となる可能性があります。
- 電池を使用する場合は、使用後にスイッチを切ってください。長期使用しない場合は、電池を取り出した状態で保管してください。
- ショートさせたり分解、加熱、火の中に入れたりしないでください。

警告

- 请勿混用新旧电池或不同类型的电池：碱性电池、标准（碳-锌）电池或充电电池（镍-镉）。
- 请勿给非充电电池充电。
- 在充电前请先将充电电池从产品中取出。
- 电池安装、充电电池充电和零件组装应由成人来完成组装。
- 请以正确的极性插入电池，并从产品中取出耗尽的电池。
- 不要直视LED灯，它可能对眼睛有害。
- 定期更换电池并观察电池状态，以免漏液导致，可能会损坏产品及其电气系统。
- 切勿造成电池短路电路。

注意：若有以上情况发生，本公司将不负责修理处理或更换。