M M S 3 2 0

KYLO REN.

1/6TH SCALE COLLECTIBLE FIGURE

INSTRUCTION SHEET




© & ™ Lucasfilm Ltd.

© Disney

© 2015 Hot Toys Limited. All Rights Reserved. www.hottoys.com.hk www.hottoys.jp

A. HOOD フードについて

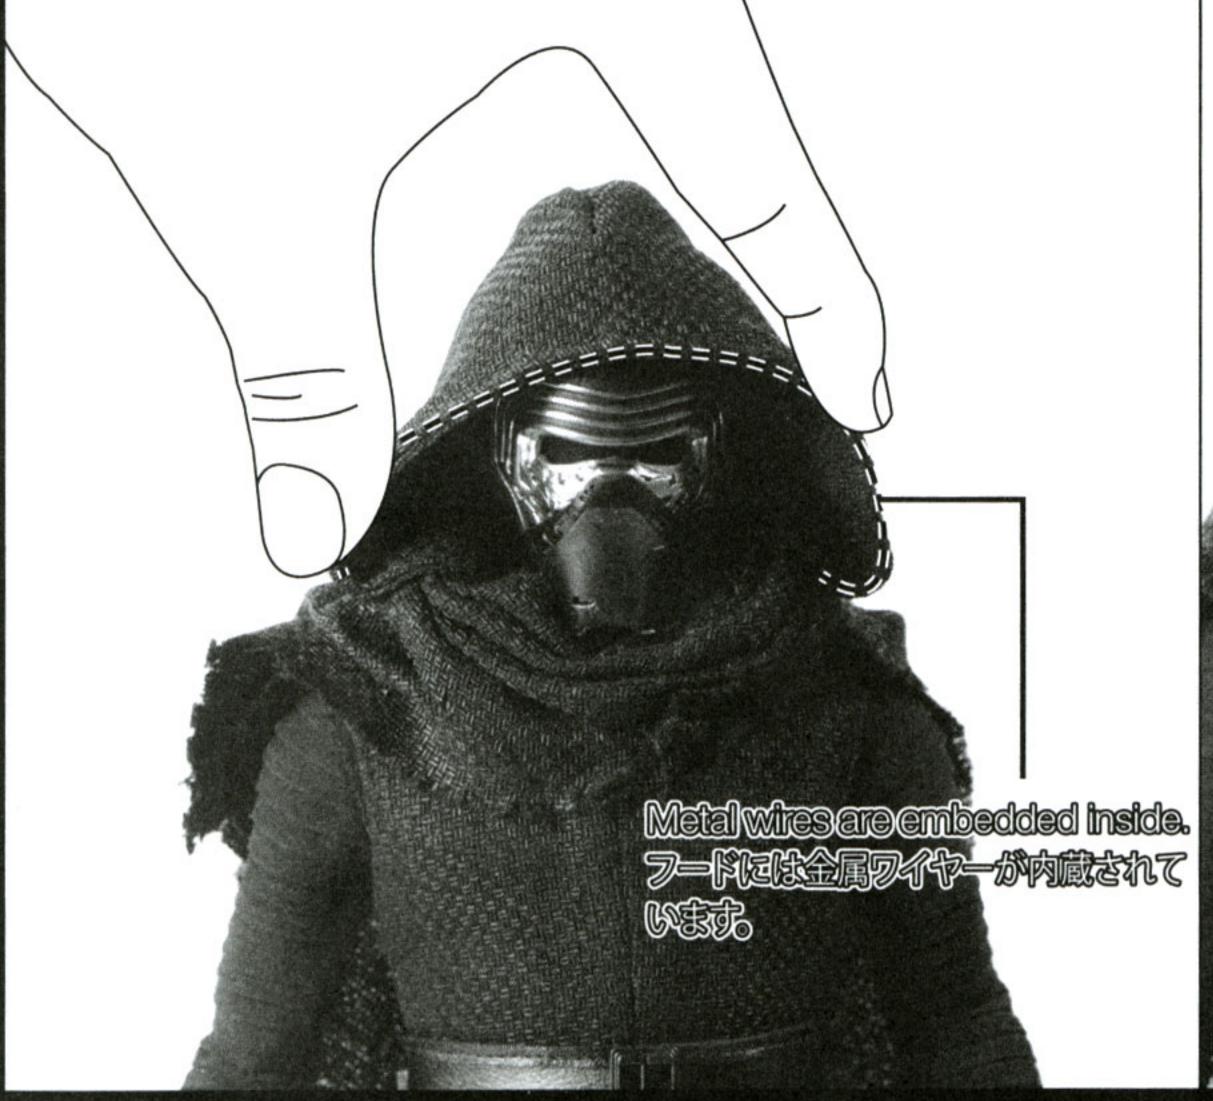


It is suggested to shape the hood in the style as pictured above. 画像を参考に、フードの形を整えてください。




Complete as shown. 完成です。

B. LED-LIGHT UP LIGHTSABER RIGHT ARM ライトセイバー (LEDライトアップ機能付き) 用右腕パーツについて

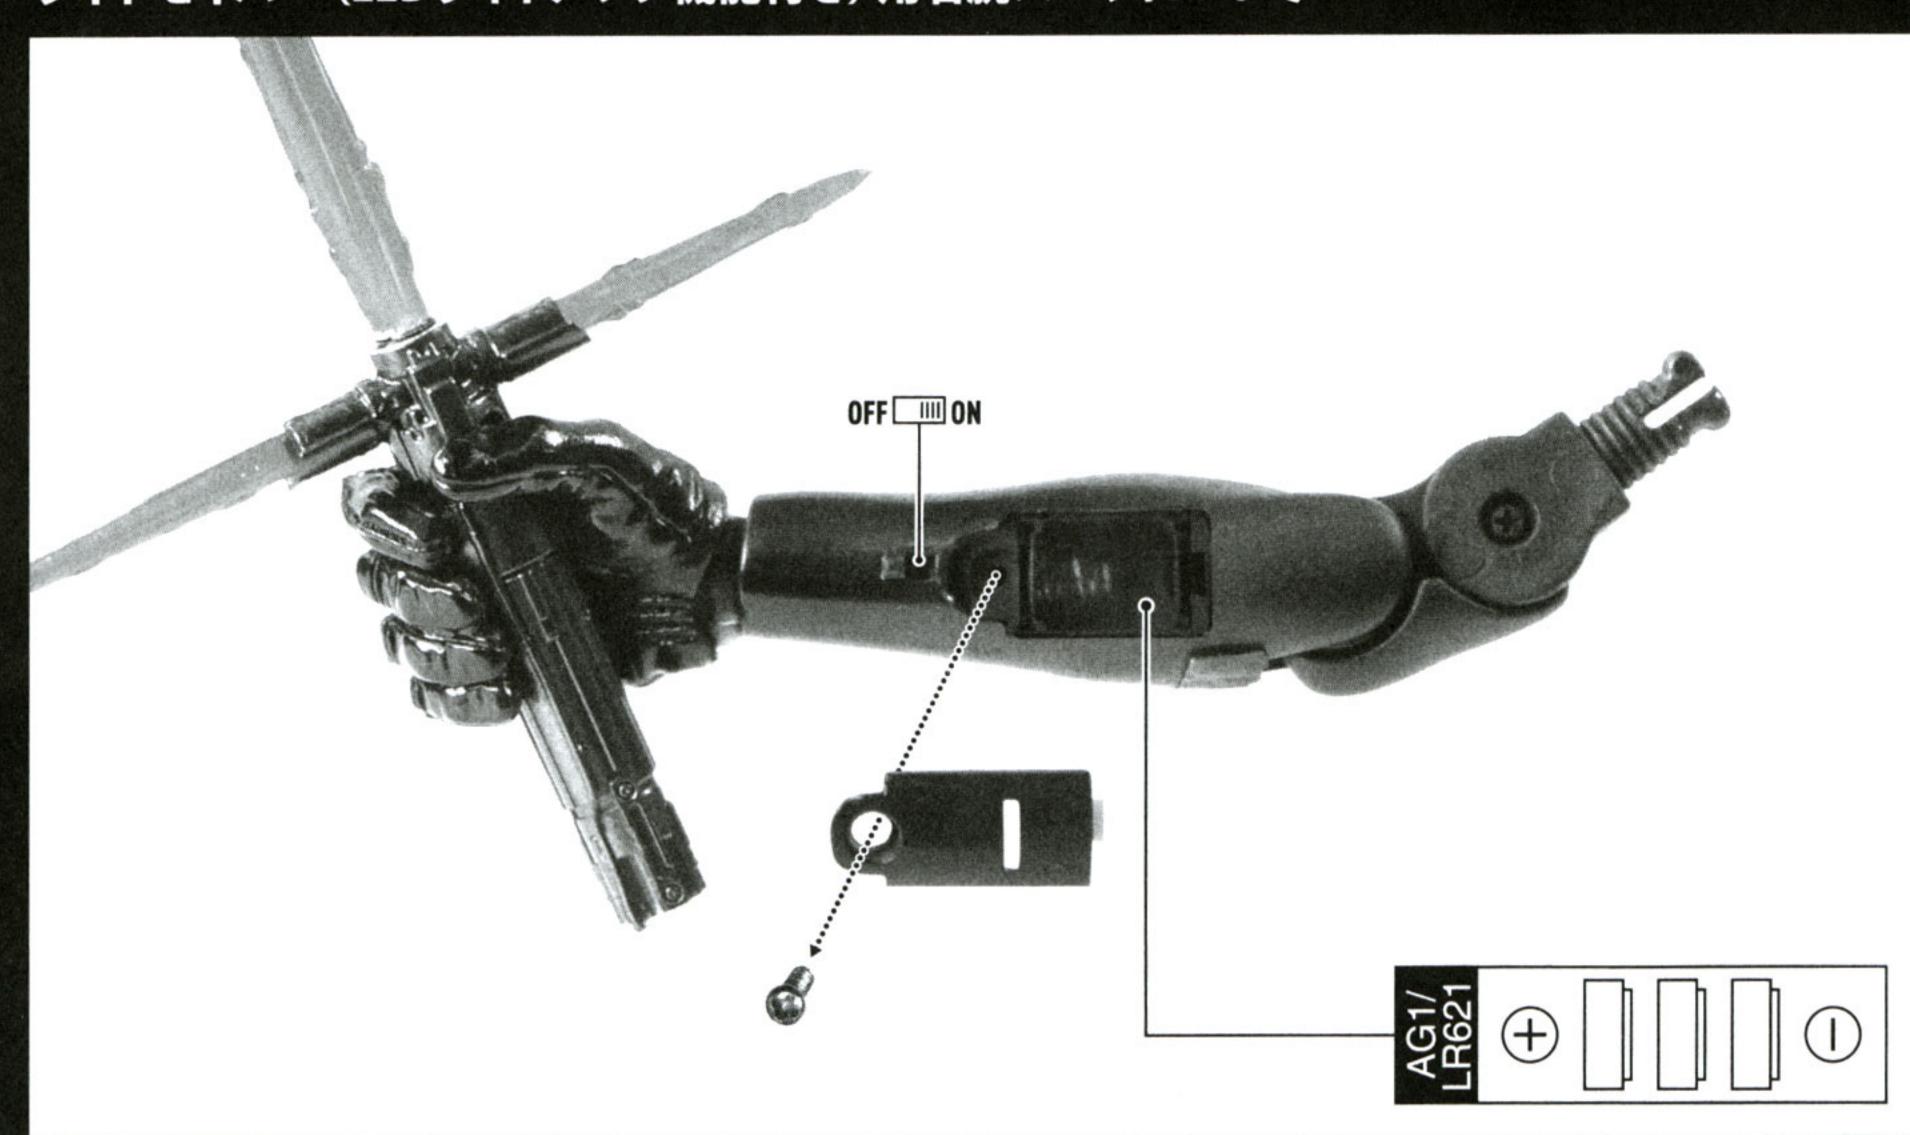


Unscrew and open the battery box to put in new batteries. Three batteries (AG1/LR621, 1.5V) are included. 製品には電池 (AG1/LR621) 3個が付属します。ドライバーを使用しバッテリーカバーを開け、電池を入れてください。

C. ATTACHING THE LED-LIGHT UP LIGHTSABER RIGHT ARM ライトセイバー (LEDライトアップ機能付き) 用右腕パーツについて II

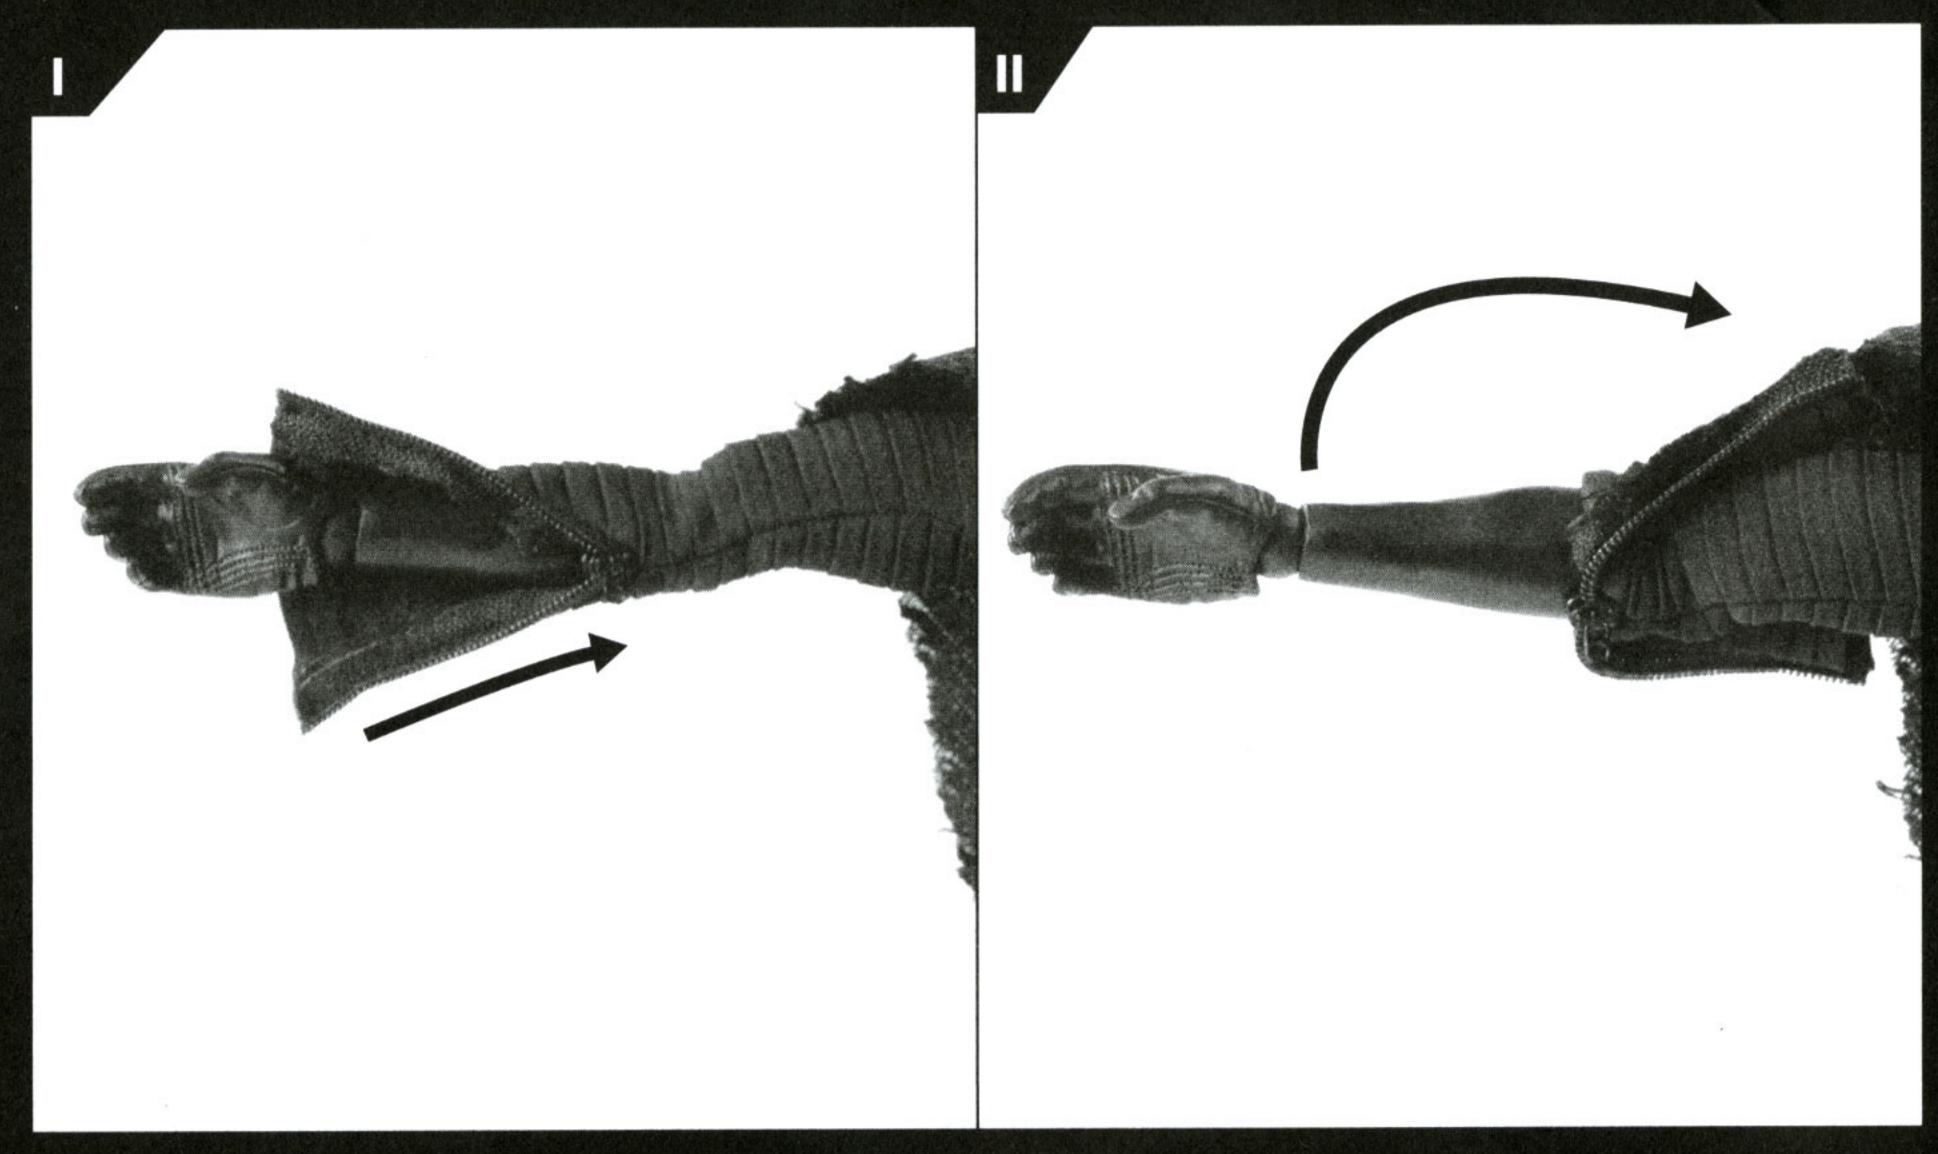


Unzip and roll up the right sleeve to take off the normal right arm. 最初に右腕のファスナーを開け、袖をまくり上げ、右腕パーツを取り外してください。

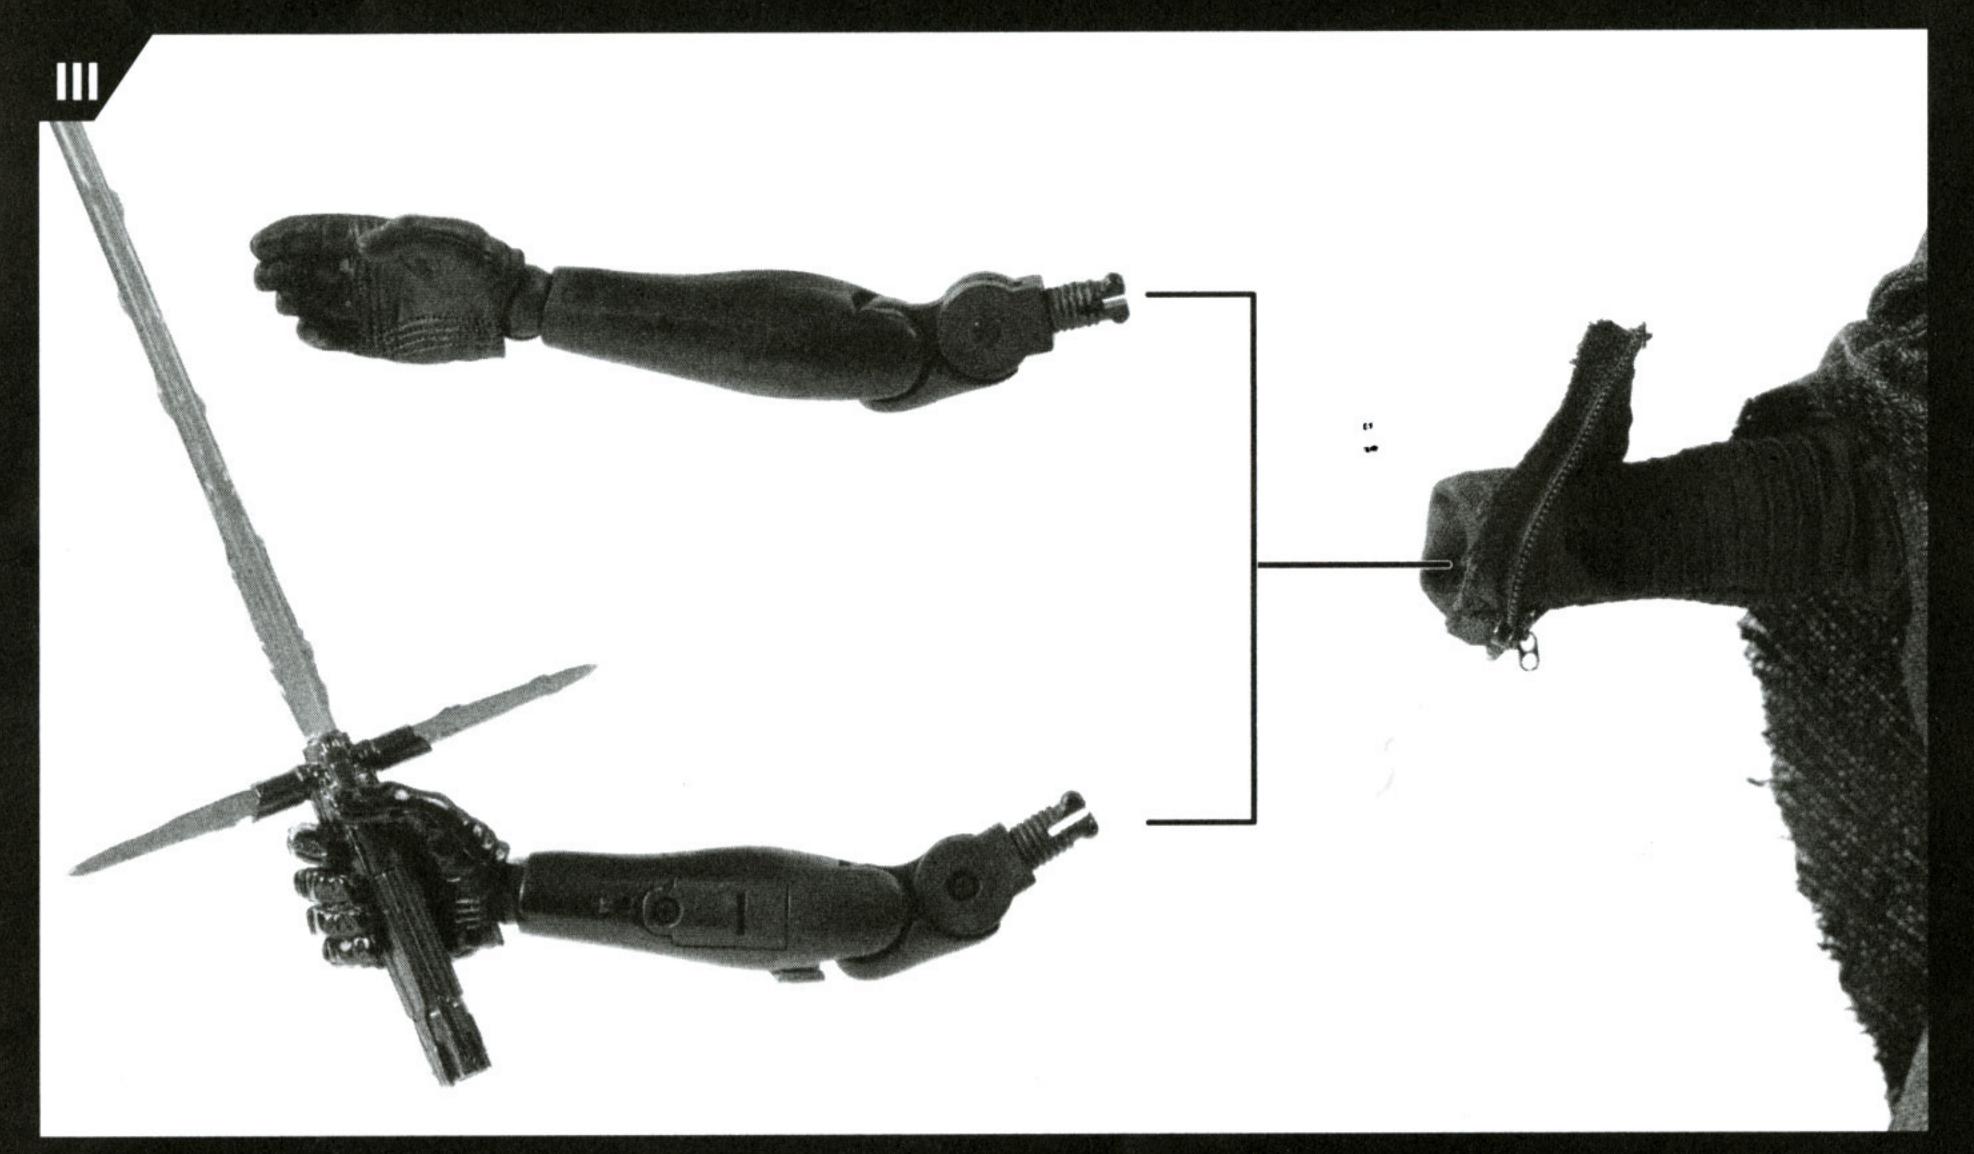

Attach the LED-light up lightsaber right arm to complete. ライトセイバー(LEDライトアップ機能付き)用右腕パーツを取り付けてください。

CAUTION ご注意

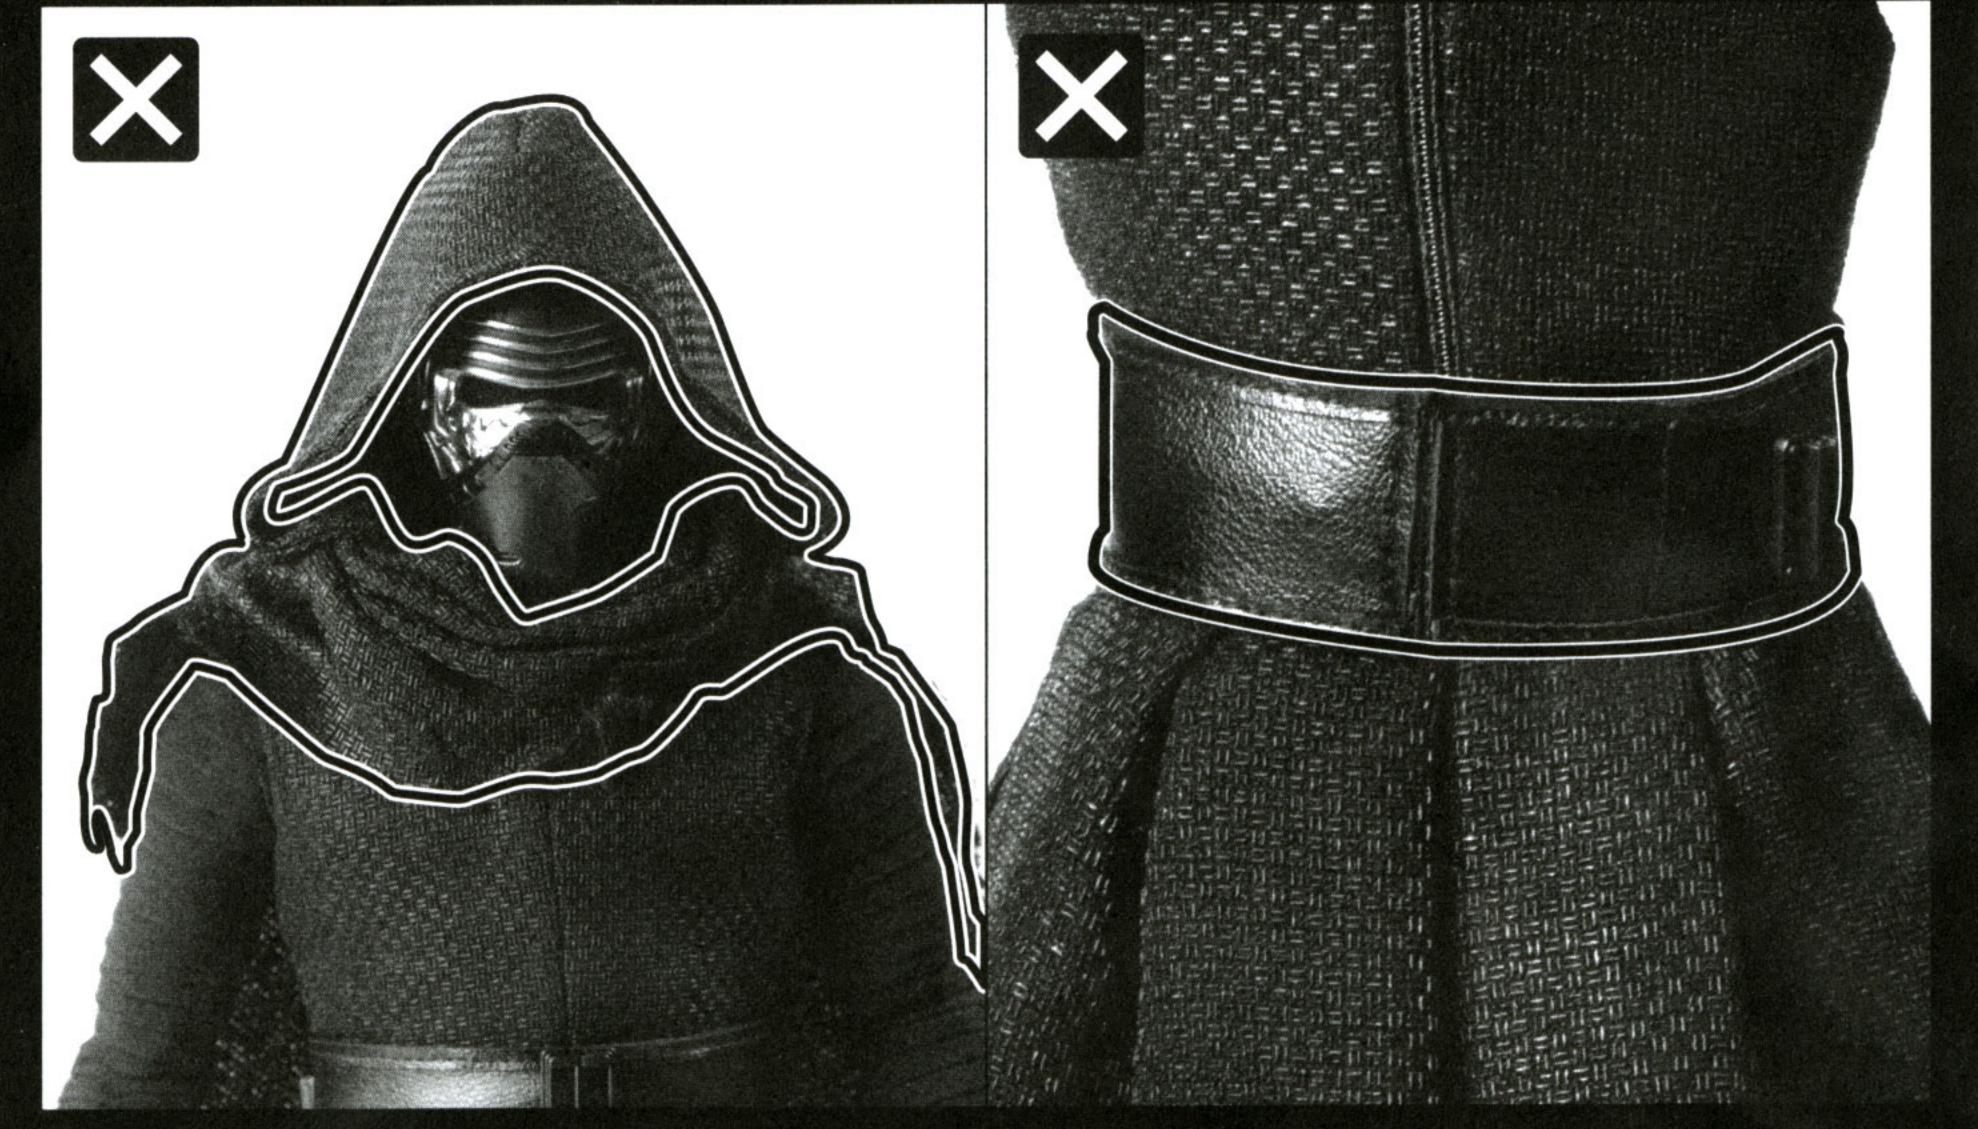

The indicated parts are non-detachable. Don't try to take it off; otherwise, the outfit may get damaged. 画像のパーツは全て取り外しできません。破損につながる恐れがあるため、取り外そうとしないでください。

WARNING ライトアップに関するご注意

- Don't mix old and new batteries.
- Don't mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 新しい電池と古い電池は混同して使用しないでください。
- アルカリ、マンガン、充電式など、種類の違う電池を混同して 使用しないでください。

HOWARD CHAN & JC. HONG PRODUCT DESIGNERS JAN WONG & VICTOR LEE ENGINEERING DESIGNER VICTOR LEE ACCESSORIES SUPERVISORS JAMES LEE PAINTING CONTROLLERS CONTROLLERS JAN WONG & VICTOR LEE COSTUME PRODUCT DESIGNER JAN WONG PACKAGE DESIGNERS DALE COOPER & MONSTER JR. PHOTOGRAPHY DIRECTORS KAKIN TT & MONSTER JR. PRODUCTION CONTROLLER JAN WONG & VICTOR LEE

CREATIVE PRODUCERS