WARNING

"This product contains a Button Cell Battery.
A swallowed Button Cell Battery can cause internal chemical burns and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."

DX24 / DX25

LUKE SKYWALKER
BESPIN

1/6TH SCALE COLLECTIBLE FIGURE

© 2022 Sol Toys Limited. The Sol Toys logo is trademark and copyright of Sol Toys Limited.
All Rights Reserved.
www.hottoys.com.hk www.hottoys.jp

INSTRUCTION SHEET

警告

1. 本产品非玩具。本产品只属收藏品。
2. 本产品不适合于户外展示或存放。
3. 本产品须由成人组装。
4. 请勿同时把旧电池或不同类型的电池：碱性电池、标准 (碳-锌) 电池或充电电池 (镍-镉) 。
5. 请勿给非充电电池充电。
6. 在初始前请将充电电池从产品中取出。
7. 电池安装、充电电池充电和零件组装应由成人来完成组装。
8. 请以正确的极性插入电池，并从产品中取出耗尽的电池。
9. 为避免伤害眼睛，不要直视灯照射对象。
10. 定期更换电池并观察电池状态，以免漏电池液，可能会损坏产品及其电力系统。
11. 切勿造成电池接头短路。
12. 本产品不含电源。仅USB 电源连接器，需使用D.C. 5V/ 2A电源适配器。
13. USB电源线必须完全接收好本产品端口后才能正常通电，否则会令产品损坏。
14. 如自行作任何表面或电子相关的改装则可能产品的保修将失效。本司将不负责修理处理。
15. 应定期检查电源线、插头外壳和其他部件是否损坏。如果发现此类损坏，
在维修前切勿使用，不得连接产品及变压器。
16. 本产品不得连接超过一个电源。
17. USB数据线不能插入电话插座。
18. 本产品可通过使用电池或D.C.转USB电源适配器操作。
19. 使用液体清洁本产品前，应与变压器断开。
20. 请清时，先用湿布材质擦干净，然后用干布材质使表面干燥。
21. 不要将产品暴露在高温或湿度高的环境，以免令产品结构变质。
22. 请避免头发接触品及手带在本产品有任何接触，以免损坏产品表层。
23. 本产品不适合三岁以下儿童使用。
24. 变压器非玩具。
25. 不当使用变压器可引致触电。
26. 请勿把只限用玩具变压器一起使用。
27. 模型只能使用指带的变压器，变压器不是模型。

重要：若有以上情况发生，本司将不负责修理处理或更换。
说明书含有重要信息，请保留，以便将来查阅。

WARNING

1. This product is not a toy. Collectible use only.
2. Do not store or display the product outdoor.
3. Adult assembly is required.
4. Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
5. Do not charge non-rechargeable batteries.
6. Rechargeable batteries are to be removed from the product before being recharged.
7. Batteries installation, charging rechargeable batteries, and parts assembly should be done by an adult.
8. Batteries are to be inserted with the correct polarity and exhausted batteries are to be removed from the product.
9. Do not look at the LED light directly; it may be harmful to eyes.
10. Change the batteries and observe the status of batteries regularly to avoid leakage which may cause damage to the product and its electricity system.
11. Never short-circuit the battery terminals.
12. D.C. to USB Power adaptor is not included in this product. D.C. 5V/2A power adaptor is required.
13. Ensure the USB cable connects to the product correctly for power supply; otherwise it will be damaged.
14. The product will not be repaired if it has been tampered with, altered, modified, or reworked.
15. Regularly check the USB power cable, plug housing and other components for damage; in the event of such damage, do not connect the product and transformer until the damage is repaired.
16. Do not connect to more than one power supply where such connection is possible without the aid of tool or breaking the product.
17. USB cable is not to be inserted into socket outlets.
18. Product can be operated by using batteries or D.C. to USB Power adaptor.
19. The product liable to be cleaned with liquid is to be disconnected from transformer before cleaning.
20. When cleaning, wipe with a damp cloth first and dry with a clean, soft cloth.
21. Do not rub or wipe the product with thinner, benzene, alcohol or any corrosive materials which could damage the product.
22. Do not expose the product in high temperature and humidity as these extremes can cause a loss of structural integrity.
23. Do not get the product in touch with sharp objects or nails to avoid material damage.
24. The product is not intended for children under 3 years old.
25. The transformer is not a toy.
26. Misuse of transformer can cause electrical shock.
27. The toy shall only be used with a transformer for toys.

Note: The above situations are not included in maintenance nor replacement.
Please keep this instruction sheet for future reference, since it contains important information.

ライトアップに関するご注意

1. 本製品は玩具ではありません。収集品としてご使用ください。
2. 本製品は屋内専用です。屋外では保管しないでください。
3. 組み立てに関する作業は大人が行なってください。
4. 古い電池と新しい電池またはいろいろな種類の電池を混ぜて使用しないでください。
5. 非充電式電池は充電しないでください。
6. 充電式電池を使用する場合は、充電する前に必ず製品から取り外してください。
7. 電池に関する作業は大人が行なってください。
8. 電池はボディ・ビーつるさいに向きでえれてください。また、消耗した電池は速やかに製品から取り出してください。
9. 点灯中のLEDライトは直視しないでください。誤った動作や視力障害の原因となる可能性があります。
10. 電池を使用する製品は、使用前にスイッチを切ってください。長期間使用しない場合は、電池を取り出した状態で保管してください。
11. ショートさせないでください。
12. 本製品に電源アダプターは付属しません。本製品は電源アダプターDC 5V/2Aに対応しております。
13. ご使用前にUSBケーブルがしっかりと接続されていることを確認してください。そうしないと、破損します。
14. 正しく接続されない状態で通電すると、ライトアップ機能の破損や予期せぬ故障につながる恐れがあります。
15. 本製品の分解・改造は絶対にしないでください。製造段階後の印刷内容を含むいかなる変化に対しても故障責任は負いません。
(株)ホットトイズジャパンは一切の責任を負いかねますのであらかじめご了承ください。
16. 本製品に接続するケーブルやプラグ、電源アダプターなどは定期的に損傷確認をしてください。これらのいずれかに損傷など不具合が見られる場合は、本製品を接続しないでください。
17. 製品を複数の電源/電源アダプターへ接続しないでください。
18. USBケーブルをコンセントに差し込まないでください。
19. 本製品は、電源または電源アダプターDC 5V/2A(別売)を使用し、ライトアップ機能を作動させることができます。
20. 本体の清掃をする時は、必ず電源アダプターを抜いてください。
21. 本体の清掃をする時は、柔らかい布で乾拭きするか、水で薄めた中性洗剤に浸した柔らかい布で拭いてください。
22. 塗料、シンナー、ベンジン、アルコールなど腐蝕性の強い液体を使用すると、変色や変形の原因となり使すので使用しないでください。
23. 製品は、直射日光の当たる場所、温度や湿度の高い場所、激しい温度変化の場所などに置かないでください。変色や変形の原因となる恐れがあります。
24. 本製品を強く振ったり、圧力を掛けるなどの強い力を加えてください。破損や金属はがにつながる恐れがあります。
25. 小さなパーツは誤って飲み込んだ場合などの危険があるので、3才以下の小さな子供には絶対に触れさせないでください。
26. 本製品及び本製品に使用する電源機器は玩具ではありません。
27. 変圧器や電源アダプターを誤使用すると感電する恐れがあります。
28. 変圧器や電源アダプターは、必ず指定の機種のものをご使用ください。
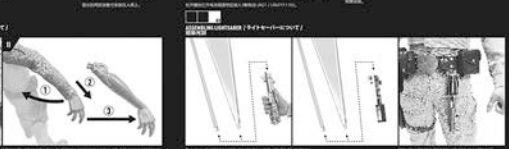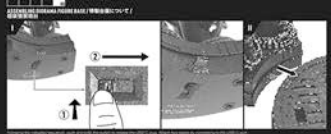
※ 取扱説明書の記載内容を守らないことにより生じた損害または故障について
(株)ホットトイズジャパンは一切の責任を負いかねますのであらかじめご了承ください。
※ 取扱説明書は、ご使用中いつでもお読みいただけるよう大切に保管してください。