
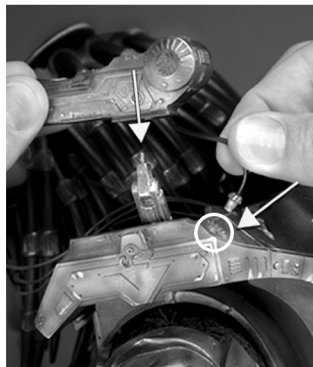


ASSEMBLY INSTRUCTIONS

PREDATOR JUNGLE HUNTER MAQUETTE

ATTENTION: PLEASE USE CAUTION DURING ASSEMBLY

FOR FURTHER ASSISTANCE: CALL US (WITHIN U.S.): 1-855-SIDESHOW CALL US (OUTSIDE U.S.): 1-805-214-2157

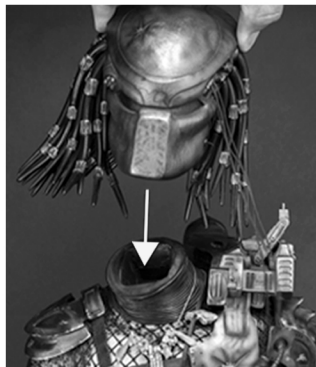

MASKED PORTRAIT INSTALL

- Step One: Slide masked Predator portrait into neck key.
- Step Two: Insert wires with a magnetized end into the key slot on Predator's left shoulder armor as shown.

ATTENTION: Be very careful when handling this Portrait and it's wires as you install or remove the piece. It is **EXTREMELY** delicate.

CANNON INSTALL

- Step One: Slide the cannon into shoulder armor key.
- Step Two: Insert cannon wire into magnetized slot directly under the cannon.



SIDESHOW

For more information visit: SIDESHOW.COM/Instructions

Predator TM & © 2017 Twentieth Century Fox Film Corporation. All Rights Reserved. © 2017 Sideshow Inc. Product specifications subject to change.